




1. Install batteries in the controller.
Switch OFF the mains isolator for the heater.

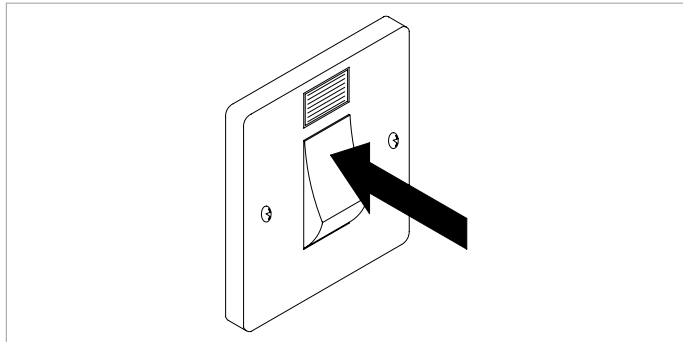


2. Undo the retaining screws for the heater.

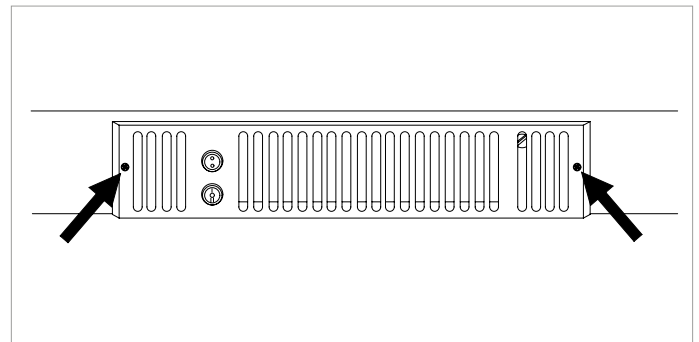


3. Withdraw the unit from the plinth.

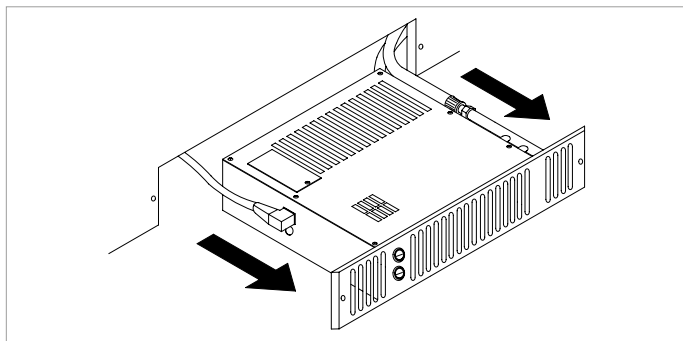


4. Disconnect the power plug from the side of the unit.

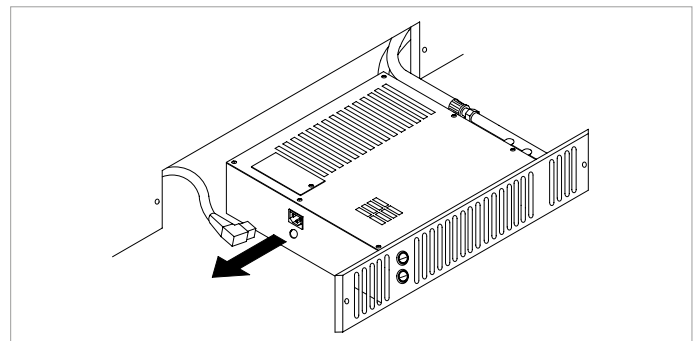


5. Connect the receiver unit between the power cable and the heater.

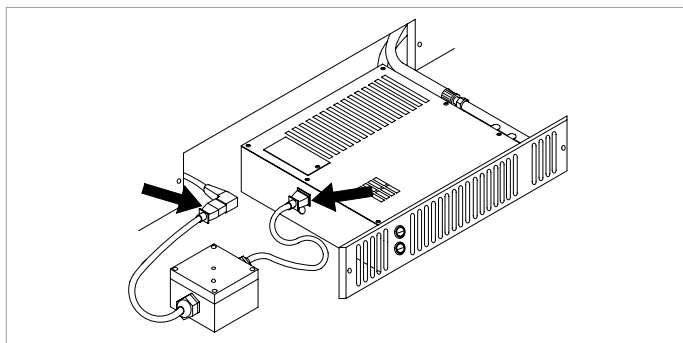

6. Push everything back into the plinth and secure with screws.

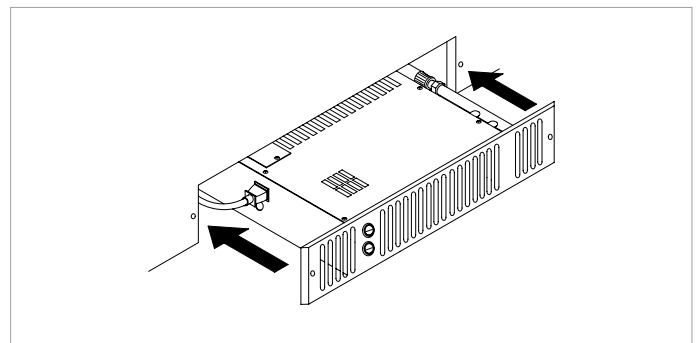

7. Turn ON the mains isolator for the heater.

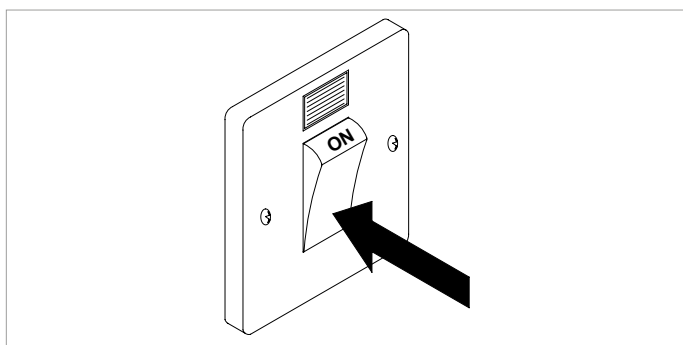

8. Within 20 seconds of turning on the power, carry out the pairing procedure as per the controller instructions.

