




Versatile, energy efficient heating

ECOVECTOR™

**Model
VE2500**

With SLVT-B Battery Controller

INSTALLATION & USER GUIDE

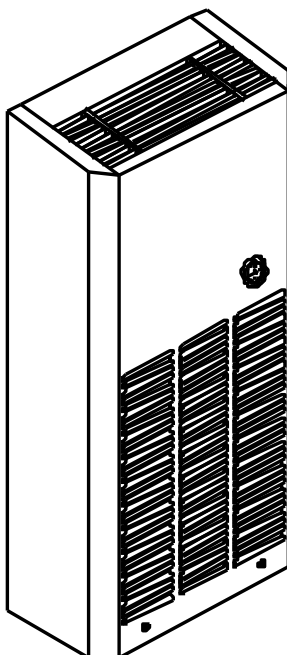

INTRODUCTION

In the event of items missing or visible damage please contact us on 01245 324560.

This heater must be operated with the supplied SLVT-B battery powered wireless controller. IT WILL NOT WORK WITHOUT IT

This heater is intended for mounting on a wall at low level. No clearance is required on either side of the heater.

This heater must not be used in bathrooms or other high humidity areas.

Ecovector™ is designed for use on standard two-pipe pumped central heating systems where the system hot water is generated from either a boiler or renewable sources. This product is not suitable for one-pipe heating systems. Pipe connections are 15mm.

We recommend the use of full flow isolating valves. These valves should be accessible after completion of the installation.


Ecovector™ is classified as a fixed appliance and electrical connection should be via a double pole 3A fused spur. The fused spur must not be directly above the heater but should be accessible after completion of the installation. If the pre-wired mains cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons. The appliance must be earthed.

To avoid possibility of vibration, this product must be installed on a flat, even surface.


Please note the guarantee may be invalidated if this product is not installed and used in accordance with this guide.

MOUNTING THE UNIT

Remove the EZ hanger from the back of the heater. Remove screws from the base of the front panel, carefully lift up and remove.

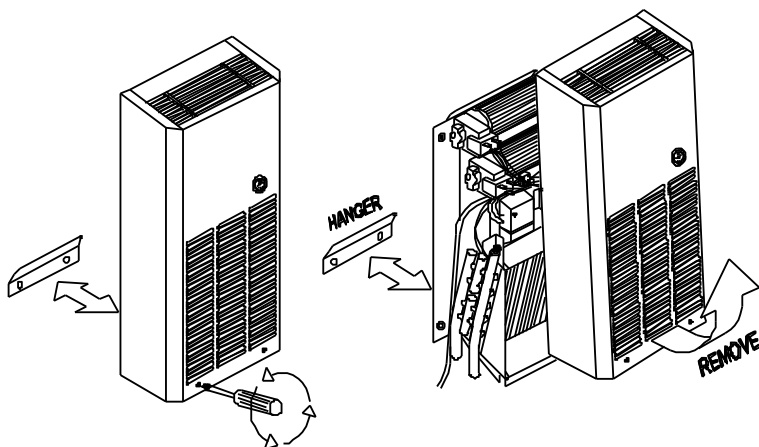

Fix the EZ hanger to the wall, position the heater on the EZ hanger and secure to the wall at the two fixing points.

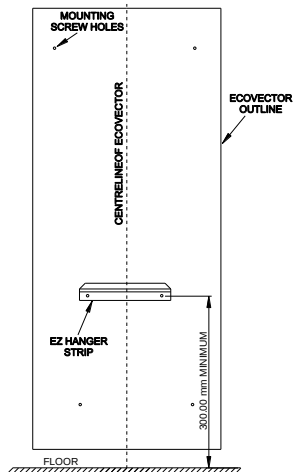


PIPE WORK

We recommend the use of full flow isolating valves. These valves should be accessible after completion of the installation.

Connect the heating system flow and return pipes to the heater pipe work. Do not use soldered fittings to the heater pipe work as the heat generated could damage internal wiring and components. The pipe nearest the front of the heater is the supply flow and the pipe nearest the chassis is the return.

Check for water leaks. Remove any trapped air from the system via the vent valve on the top left-hand side of the heat exchanger. Do not over tighten the air vent

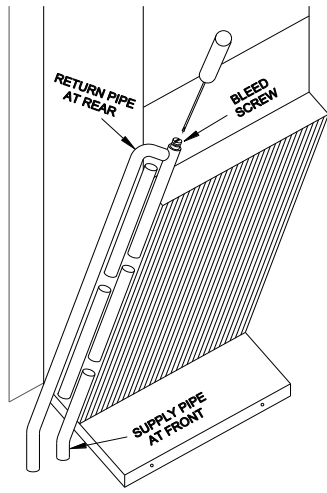

ELECTRICAL CONNECTION

ALL ELECTRICAL INSTALLATIONS CONNECTIONS MUST COMPLY WITH BS7671, 1992 AND THE IEE REGULATIONS. CHECK THE VOLTAGE ON THE HEATER IS CORRECT FOR YOUR SUPPLY. IF IN DOUBT, CONSULT A QUALIFIED ELECTRICIAN.

If the pre-wired mains cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons.

Isolate the supply and connect the heater three core mains lead to the fused spur (3A) in accordance with the instructions provided on the mains lead label. (The supply wire which is coloured green or green and yellow must be connected to the terminal marked **E** on the appliance, the supply wire which is coloured black or blue must be connected to the terminal marked **N** on the appliance and the supply wire which is coloured red or brown must be connected to the terminal marked **L** on the appliance).

The fused spur must not be directly above the heater but should be accessible after completion of the installation.

SLVT-B Wireless Controller Installation.

Important: This heater will not function unless it is paired and used with the SLVT-B wireless controller. See pairing set up guide on page 5.

The SLVT-B controller is supplied with a white plastic back box but it was designed to fit onto most single gang back boxes. The controller is powered by two AAA batteries that are supplied.

The controller should be fitted at a height of 1.5metres from floor level and within 10 metres from the heater. To ensure trouble free operation ensure the thermostat is mounted away from any possible sources of interference (such as radios, TV sets, computers, etc). Do not mount on or in close proximity to large metal objects. It is recommended that the batteries should be replaced every 12 months.



Please refer to the instructions packed with the controller for full setting options and functions.

Quick Setup Guide – SLVT-B Electric Heater Controller Pairing with Heaters

(Battery Powered Wireless Controller)

Attention: Your Heater will not function unless it is used and paired with this controller.



Step 1: Turn **OFF** the mains power supply to the heater at the fused spur or power connection



Step 2: Set the heater switches on the heater to **ON**



Step 3: On the back of the controller, you will see the battery compartment. **Pull and remove** the battery tag. Look at the front display. If the batteries are good, the front battery display will show the ambient room temperature.



Step 4: Turn **ON** the mains power supply to the heater at the fused spur or power connection and **within 20 seconds** press and hold, the **ON** button on the controller until the display shows **"PAIR"**

On Button



Step 5: After the pairing is finished, the display will show **"TEST"**. If the pairing was successful and the heater should function (This can take up to 5 seconds after pairing)



- If process fails repeat all the steps again (ensure that the thermostat temperature is set higher than the ambient room temperature)



Step 6: Press the power button once to exit pairing and then press again to switch back on

Step 7: Using the up and down arrow buttons set the room temperature to the desired temperature



Note: The power supply to the heater must be switched off before the pairing process (step 1)


ease carefully read the Installation and Control Guide included with the product for full control and operation guide.

INSTALLATION COMPLETION

If this heater is installed on the same circuit as panel radiators balance the central heating system.

When the installation is working correctly, remember to set the wireless thermostat control to its normal setting.

Refit the outer casing to the chassis and refit screws in base of front panel.

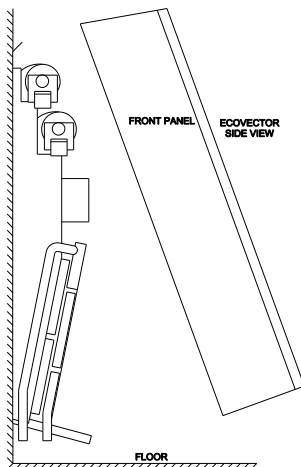

Installation Notes:

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

COMMISSIONING

- 1) This heater is equipped with a low temperature cut out thermostat (+38°C) which requires hot water to be sensed before the fan(s) will run.
- 2) Ensure that the heat source is circulating hot water through the heating system
- 3) Ensure the heater is paired with the SLVT-B wireless controller (Page5). **The heater will not operate unless used with the controller.**
- 4) Adjust the set point of the thermostat at least +3°C higher than the measured room temperature (Page 5)
- 5) Ensure the speed switch on the heaters casing is in position “I” or “II”

Providing that there is hot water circulating & the SLVT-B wireless controller is calling for heat the unit will run.

Once commissioning is complete, set the thermostat & speed setting as desired.

Installation Notes:

FAULT FINDING

No heat output on settings I and II / Fan does not run on any switch setting

- Check the power supply is switched ON.
- Check the heating system is ON.
- Check the SLVTB controller is paired with the unit
- Check the SLVTB controller is switched on and calling for heat.
- Check the service valves (if fitted) are open.
- Bleed air from appliance.
- Increase the boiler water temperature.
- Balance the central heating system if installed on the same circuit as panel radiators and increase the circulating pump speed if required.
- Check fuse in the fused spur.
- Check wiring connections at the fused spur.

In the event of difficulty please contact us on 01245 324560. It will be more helpful if you do not remove the product from the central heating system.


We would be most grateful if you would leave this installation & operation guide and the guarantee registration card with the owner of the property.

USER GUIDE

Your product is covered by a free 5-year parts and labour guarantee; please complete and return the Guarantee Registration Card to us as soon as possible to ensure that should you require assistance we can help you quickly and efficiently.

Your Ecovector™ is designed to operate as part of your central heating system in the same way as a panel radiator. Providing you leave the heater switches in their normal operating positions it will switch on and off automatically with you central heating system.


Heat from your central heating system passes through a heat exchanger transferring its heat to the aluminium fins, room air is drawn in the top grille and heated as it passes through the heat exchanger before being gently expelled back into the room at floor level.

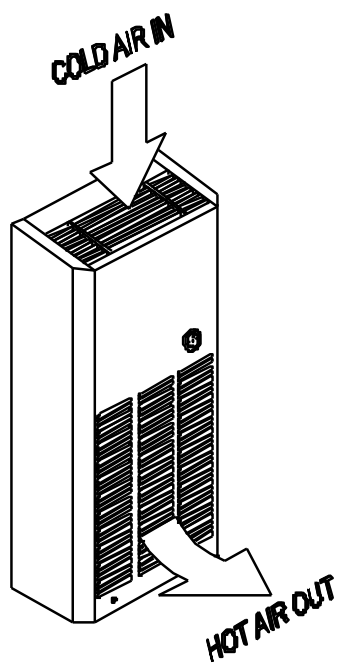

Ecovector™ includes a low temperature thermostat that prevents the fan(s) operating until the central heating system water passing through the heat exchanger reaches a set temperature.

Heating

Ensure your central heating is ON, the heat output switch set to Low (I). If you require a faster warm up set the heat output switch to High (II)

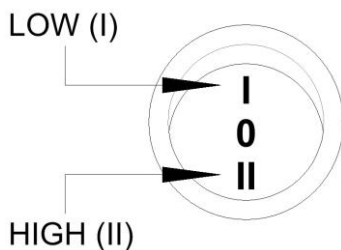

This image shows a full page of blank, lined paper. It features approximately 30 horizontal black lines spaced evenly across the page, typical of notebook or legal stationery. The lines are thin and extend from the left edge towards the right. There are no margins, text, or other markings on the page.

[illegible]

IMPORTANT

- The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
- Children should not be permitted to play with the appliance
- Ensure that the fan is switched off from the supply mains before removing the guard
- Any specifications with regards to dimensions of space required for the appliance to operate effectively.



Products with this symbol (crossed out wheeled bin) cannot be disposed as household waste. Old electrical and electronic equipment must be recycled at a facility capable of handling these products and their waste by-products. If you are purchasing replacement equipment your retailer may offer a 'take back' scheme or will be able to give details of the nearest approved authorised treatment facility. Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment.

WEEE Registered Code:

WEE/ED0093VW



Smith's Environmental Products Ltd

Blackall Industrial Estate, South Woodham Ferrers, Chelmsford, Essex, CM3 5UW

Tel: 01245 324900 Fax: 01245 324422

Sales: sales@SmithsEP.co.uk General Information E-mail: info@SmithsEP.co.uk Web: www.SmithsEP.co.uk

For Ireland, contact MT Agencies (Ireland) Ltd on Tel: 00353 1 844 3212

As part of the policy of continuous product improvement,
Smith's Environmental Products Ltd reserves the right to alter specification without prior notice.

Product Registration

Thank you for purchasing a Smith's product. It has been designed and manufactured to the highest quality standards to ensure it gives you efficient and trouble-free service for many years. We are committed to achieving the highest standards and our faith is supported by a free parts and labour guarantee with every product.

For more information on the warranty period for this product and to register your product please visit our website smithsep.co.uk/product-registration/

This gives you the peace of mind that in the unlikely event of product failure, we will repair or replace the product completely free of charge providing the product has been installed, used and maintained in accordance with the instructions. Your statutory rights are not affected by this warranty.

It is important to register as soon as possible online at: smithsep.co.uk/product-registration/ This will ensure you will receive prompt and efficient service if your product requires attention within the warranty period. If you do not register your product, you will be required to produce proof of purchase prior to receiving service.

SCAN HERE TO REGISTER
YOUR PRODUCT



If you experience any problems with the use of your product, please contact our after-sales office +44 (0) 1245 324560.