

### Accessories

Smith's offer a range of accessories which can be used in conjunction with this product.

This includes:

Remote Room Thermostats (wired and wireless inc tamper proof option)

Wall mounted control switch

Adjustable low temperature cut-out (LTC)

Plinth (for floor standing application)

Proportional heat output controller (PHOC)

Thermostat T1

Thermostat T2 (AC only)

Thermostat and Auto- speed control (T1/T2)

Air inlet filters for all models.

For further information on accessories or spares please contact either your supplier or Smith's Environmental Products Ltd or visit [www.SmithsEP.co.uk](http://www.SmithsEP.co.uk)

Technical designation CL 60, 90, 120, 150, 180

*Products with this symbol (crossed out wheelie bin) cannot be disposed as household waste. Old electrical and electronic equipment must be recycled at a facility capable of handling these products and their waste by-products. If you are purchasing replacement equipment your retailer may offer a 'take back' scheme, or will be able to give details of the nearest approved authorised treatment facility. Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment.*

WEEE Registered Code : WEE/ED0093VW



### Smith's Environmental Products Ltd

Blackall Industrial Estate, South Woodham Ferrers, Chelmsford, Essex, CM3 5UW

Tel: 01245 324900 Fax: 01245 324422

Sales: [sales@SmithsEP.co.uk](mailto:sales@SmithsEP.co.uk) General Information E-mail: [info@SmithsEP.co.uk](mailto:info@SmithsEP.co.uk) Web: [www.SmithsEP.co.uk](http://www.SmithsEP.co.uk)

For Ireland (Republic & Northern), contact MT Agencies on 00 353 1 864 3363

In light of our policy of continuous development Smith's Environmental Products Ltd reserve the right to alter specifications without prior notice.



# Caspian


## AC Series fan Convector

### Models: UV, SL, FF, EXT, TT

### Sizes: 60|90|120|150|180

Suitable for Low, High & Ceiling Level Installations

## Installation & User Guide

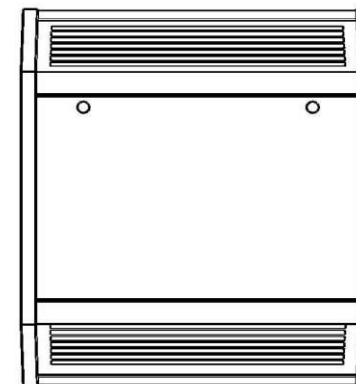


### User Information.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance. Cleaning and user maintenance shall not be made by children without supervision. (refer EN 60335-1 clause 7.12).

## Introduction

These heaters are designed as a universal mounted product and can be mounted at low level, high level and ceiling level. They can be installed in either orientation to suite exiting air flow. The exiting air grille (air out) is labelled (please remove label upon installation).


Caspian UV

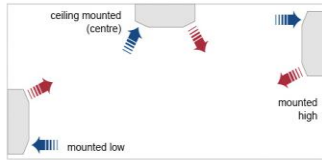


Caspian SL




Caspian FF

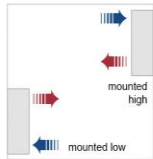

Caspian TT

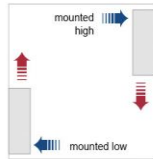

Caspian EXT

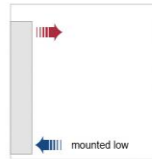

When installed in a suspended ceiling the heater must be supported by suitable chain or threaded rods. Do not attempt to fix the heater to the ceiling tile frame.


These heaters must not be installed in wet rooms or other high humidity areas. These heaters are designed for use on standard two-pipe pumped central heating systems with a maximum water temperature of 86° C and a maximum pressure of 6 bar (88lbs/in<sup>2</sup>). Pipe connections are 22mm and either pipe may be used as flow or return.

These heaters are classified as a fixed appliance and the electrical connection should be via a 3A fused spur. The fused spur must **not** be directly below the heater but should be accessible after completion of the installation. All heaters must be earthed. It is recommended that this heater is wired via a remote room thermostat.

To avoid the possibility of vibration these units must be fitted to a flat even surface. This heater is fitted with a 35°C Low Limit Stat (L.T.C). An adjustable low temperature cut-out is available (See accessories on page 8). To conform to Building Regulations Part L (Part J in Scotland), a remote room thermostat can be used in conjunction with this heater. Refer to the instructions supplied with the thermostat. **Please note the guarantee may be invalidated if this product is not installed and used in accordance with these instructions.** For further details please contact our Technical Support on 01245 324560.

## Installation Guide

1. Unlock and lower the front access panel using the keys supplied.

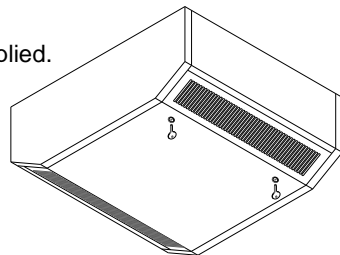

## Fault Finding

1. The fan does not run on any speed setting.
  - a. Check the power supply is switched ON.
  - b. Check the fuse in the fused spur.
  - c. Check the wiring at the fused spur.
  - d. If thermostat is fitted ensure it is calling for heat
  - e. Check the central heating is switched ON
  - f. Vent any trapped air from the system (with the heating system turned OFF).
2. No heat output.
  - a. Vent any trapped air from the system (with the heating system turned OFF).
  - b. Check the central heating is switched ON.
  - c. If a thermostat is fitted ensure it is calling for heat.
  - d. Balance the central heating system if installed on the same circuit as panel radiators and increase the circulating pump speed if required.
  - e. Increase the boiler water temperature.

Providing the power supply is switched on the room thermostat (if fitted) is calling for heat the heater will switch on and off automatically with the central heating system.

In the event of difficulty please contact our technical help-line on 01245 324560. It will be helpful if you do not disconnect the heater from the central heating system.

## Maintenance.

**Warning! Isolate from the electrical supply before performing any work on the unit.**

The internal air filter is removable for servicing. To gain access to the filter unlock and lower the front access panel, remove the 2 screws from the filter enclosure panel and lift out. Carefully lift out and remove filter (see fig 3 on page 5) The filter should be gently tapped to remove any accumulated dust and vacuumed if necessary.

The coil fins are delicate so take care and only use a soft brush or vacuum cleaner to remove any dust that may have accumulated.


The fan(s) and motors should not require servicing. Please contact your supplier if damaged.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified persons in order to avoid hazard. (Refer EN 60335-2-30 clauses 7.12 & 7.12.5)

Please note in the event of an engineer's visit, Smith's Environmental Products Ltd reserve the rights to apply a call-out charge should the fault prove to be with the system or installation and not the heater appliance.

To replace filter use reverse the removal instructions and ensure the lower front access panel is securely locked.


## Wiring Diagram

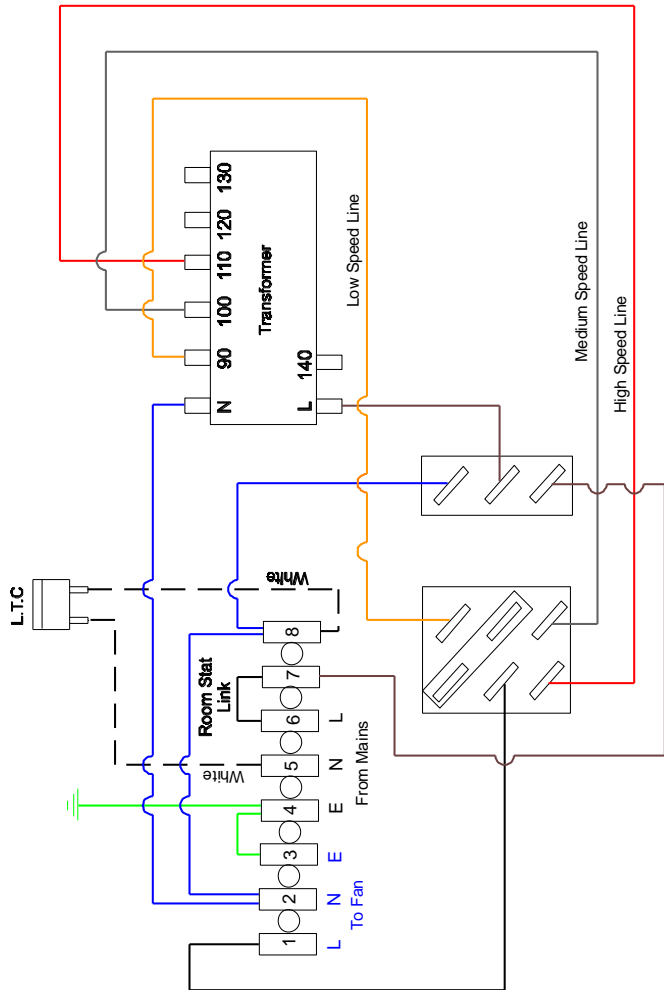

Caspian Model Transformer Tappings					
Line Speed	Caspian 60	Caspian 90	Caspian 120	Caspian 150	Caspian 180
Low	90	90	110	110	110
Med	100	100	130	130	130
High	110	110	140	140	140

(Caspian Models 60 & 90 Tappings Shown in Wiring Diagram)

2. Fix the unit to the ceiling or wall via suitable fixings. If fitted to suspended ceilings or similar then suitable means of support such as threaded rods or chains must be used.

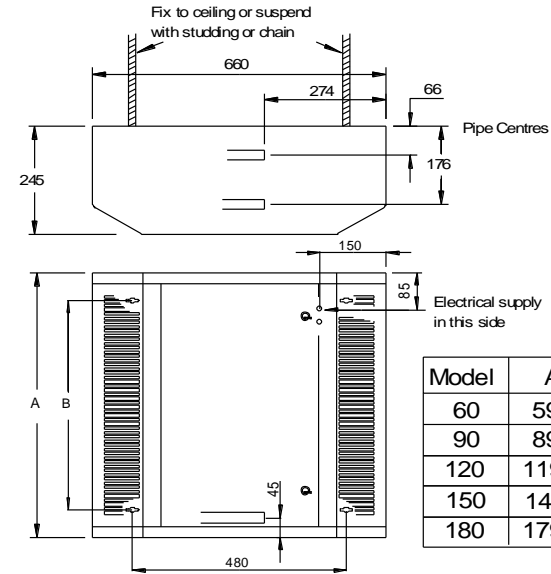


Model	A	B
60	595	470
90	895	770
120	1195	1070
150	1495	1370
180	1795	1670

3. Connect the heating system flow and return pipes to the heater pipe work. Pipe entry/ exit can be made through either the back of the unit or by using the Pipe Knockouts on the unit casing (See Fig 3). Do not use soldered fittings to the heater pipe work as the heat generated may cause damage to internal wiring and components.



Note: We recommend the use of full-flow service valves. The valves should be accessible after completion of the installation. We also advise the fitting of an air vent at the highest point on either the flow or return pipe to remove any air trapped within the system.

4. Open the full flow service valves (see above) and check for water leaks. Remove any trapped air from the unit via the built in bleed screws as shown in the diagram below.

Fig 3

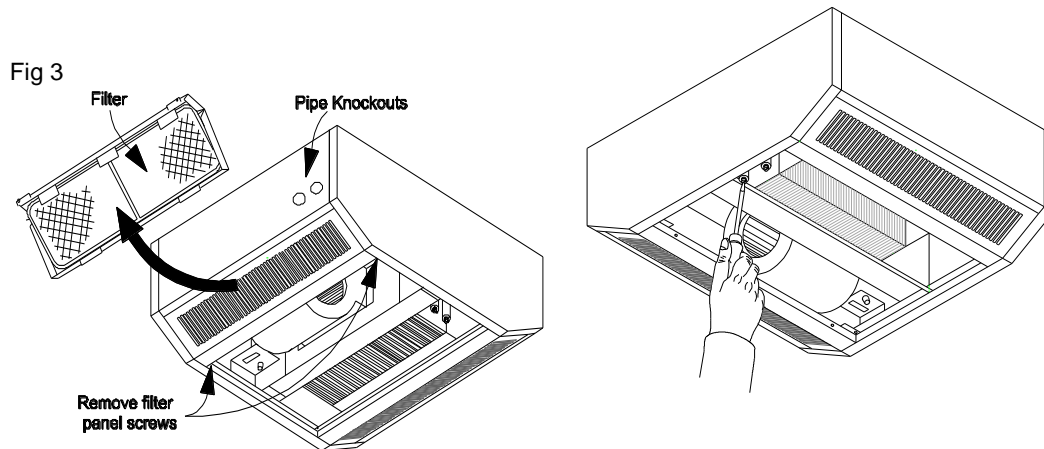

5. Isolate the electrical supply
6. Connect the power supply from the fused spur (3 Amp) to the heater terminal block marked **Supply E N L** (see fig 2) via the cable entry hole in the top chassis of the heater. The fused spur must not be directly below the heater and must be accessible after the installation is complete. All electrical work should be carried out in accordance with current IEE regulations.

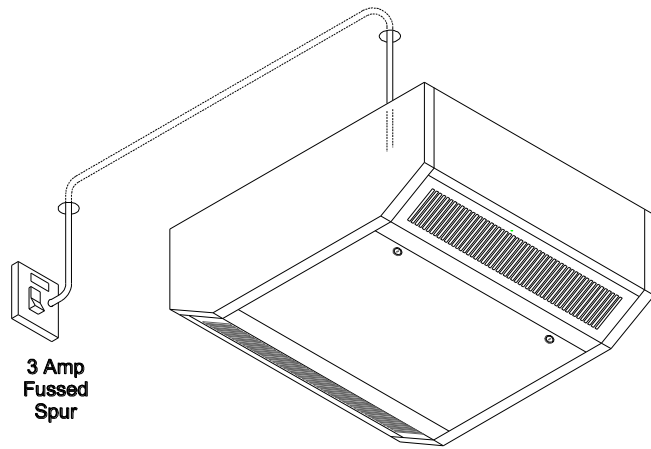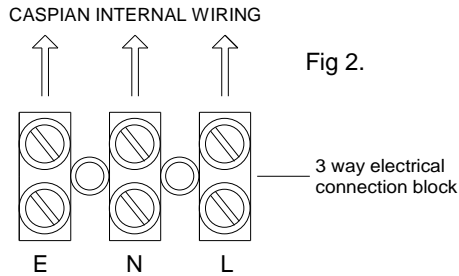

6. To wire a room thermostat (not supplied) to the heater remove link wire between terminals 6 & 7 & on the connection block as shown in the wiring diagram on page 6.

For further information refer to the room thermostat manufacturers instructions.


### Commissioning

1. Turn on the electrical supply at the fused spur.
2. Turn the thermostat control (if fitted) to maximum.
3. Turn on the central heating system.

4. If these heaters are installed on the same circuit as panel radiators balance the central heating system.
5. If the installation is working correctly remember to reset the thermostat control (if fitted) to its normal setting.
6. Set the fan speed control to the desired position (see fig 2)
7. Lift up and close front access panel, ensure this is secure and locked in place with keys provided.
8. Please leave this Installation & User Guide with the user for future reference.

### Heating

Ensure the central heating system is **ON**. Switch on the heater (the neon switch will illuminate). Set the thermostat control (if fitted) to the desired temperature. Providing the water temperature in the central heating system is more than 35°C and the thermostat (if fitted) is calling for heat the product will switch on. If you require a faster warm up move the heat output switch to boost. When the room reaches the desired temperature you may move the heat output switch to low. These switches in themselves do not isolate the unit from the mains supply

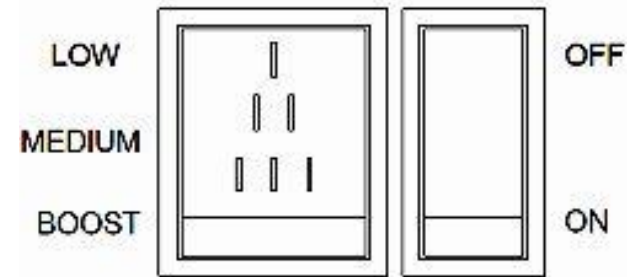

It is recommended that the model chosen is capable of maintaining the calculated heat loss at medium heat output enabling the high speed setting to be used for faster heat up and the low speed for maintaining temperature.

## Guarantee Statement

Thank you for purchasing a Smith's heater.

It has been designed and manufactured to the highest quality standards to ensure it gives you efficient and trouble-free service for many years.

To back up our commitment, included with your product is a **free five year parts and labour guarantee.**

This gives you peace of mind that in the unlikely event of the product failing within the first five years, we will repair or replace the product completely free of charge provided the product has been installed, used and maintained in accordance with the instructions.

It is important to register within 7 days. This will ensure you receive a prompt and efficient service, if your product requires attention within the guarantee period. If you do not register your product, you will be required to produce a proof of purchase prior to receiving this service.

 
If you experience any problems with the use of your product, please contact our **after-sales office** on 01245 324560.

Smith's Environmental Products Ltd manufactures a complete range of heaters for domestic and commercial applications.


If you require any further information, please contact us on **01245 324900** or visit our website at **[www.SmithsEP.com](http://www.SmithsEP.com)**.

Your statutory rights are not affected by this guarantee.

**Please pull this registration card from the booklet and fill in all parts and return.**



please fold along here

 

**Please  
affix  
stamp  
here**

**Smith's Environmental Products Ltd**  
**Units 1 & 2 Blackall Industrial Estate**  
**Hamberts Road**  
**South Woodham Ferrers**  
**Chelmsford**  
**Essex**  
**CM3 5UW**

## User Details

User Name Mr/Mrs/Miss/Ms/Other .....

Initials ..... Surname .....

Address .....

.....

..... Post Code: .....

Telephone: .....

Product & Model installed (e.g. Space Saver SS5)

.....

Room Installed (e.g. Kitchen): .....

Your details will only be held by Smiths Environmental Products Ltd and used solely to provide customer services and product information.  
If you do not wish to be contacted, please put an x in the box.

## Installer Details

Company name: .....

Principal contact: Mr/Mrs/Miss/Ms/Other: .....

Initials: ..... Surname: .....

Address: .....

.....

..... Post Code: .....

Telephone: .....

Date of installation ...../...../.....

Room Installed (e.g. Kitchen): .....

Your details will only be held by Smiths Environmental Products Ltd and used solely to provide customer services and product information.  
If you do not wish to be contacted, please put an x in the box.

## Guarantee Registration Card & Customer Satisfaction Survey

Dear Customer

We hope our product suits all your requirements; it would help us immensely if you could find the time to fill in this form, your response will help us maintain the quality standards we all expect in today's climate.

Customer name \_\_\_\_\_ Date \_\_\_\_/\_\_\_\_/\_\_\_\_

Email Address \_\_\_\_\_@\_\_\_\_\_

Product Name \_\_\_\_\_

Tick as appropriate

	V Good	Good	Fair	Poor
Product	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Delivery	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Sales & Ordering	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Response to any problems	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Comments .....

.....

.....

Thank you for your time to fill in this survey, the response will help us to serve your needs more effectively. Please return by fax to 01245324422.

Quality Control Manager: Ron Brown

ron.brown@smithsep.co.uk