

## Quick Setup Guide – SLVTB Electric Heater Controller



### Pairing with heaters (Battery Powered Wireless Controller)

Your Heater will not work unless it is used and paired with this controller

 
In order to pair your appliance with the controller:



**Step 1:** On the back of the controller, you will see the battery compartment. Pull and remove the battery tag. Look at the front display. If the batteries are good, the front battery display will show the ambient room temperature.



**Step 2:** Turn the power to the appliance **ON**, and within **20** seconds press and hold, the **ON** button on the controller until the display shows **"PAIR"**



**Step 3:** After the pairing is finished, the display will show **"TEST"**. If the pairing was successful and the appliance should function (This can take up to 5 seconds after pairing)



- If process fail repeat all the steps again (ensure that the thermostat temperature is set higher than the ambient room temperature)



**Step 4:** Press the button to exit pairing and switch **OFF**



- Please carefully read the Installation and Control Guide included with the product for full control and operation guide.